

# INSTALLATION MANUAL

# 48625

## Level of Difficulty

Easy

## Weight Capacity

Gross trailer weight (GTW) 25,000 lbs.

## Parts List

Item	Qty	Description
1	1	Channel-mount lunette eye
2	1	Locking pin

## Tools Required

Torque wrench	Ratchet
Socket, 15/16"	Wrench, 15/16"

## Torque Specifications

5/8" bolt 180 ft.-lbs.

Use above torque setting unless otherwise noted

## Product Registration

CURT Group stands behind our products with industry-leading warranties. Provide feedback and help us to improve our products by registering your purchase at: [warranty.curtgroup.com/surveys](http://warranty.curtgroup.com/surveys)

## ⚠ WARNING

Never exceed the vehicle manufacturer's recommended towing capacity.

Do not modify this lunette eye in any way. Unauthorized modification may impair the function and / or safety and could affect the life of the product and void the warranty.

Maintain adequate vertical down (tongue) load to have control of the trailer (generally 10%), but do not exceed the specified rated capacities.

Trailers and equipment are designed for on-road towing within the stated capacities. For off-road applications, reduce the capacities listed in the specifications table by 25%.

Keep safety chains in place and in working order. Never operate the product without the safety chains attached to vehicle.

## Product Photo



## ⚠ CAUTION

Check for damaged parts before each use. Carefully check that the product will operate properly and perform its intended function. Replace damaged or worn parts immediately. Never operate the product with a damaged part.

## NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

## Maintenance

Inspect the unit for proper operation, and worn, damaged or missing parts. Replace as required or when the unit's wear exceeds 1/8" from the original surface.

Check the hardware torque specification after the first 200 miles of towing and every 400 miles after that.

### Mounting the Lunette Ring (channel-mount required, sold separately)

Determine the optimal height of the lunette ring. **Note:** Lunette ring can be flipped to achieve greater drop or rise.

Secure the lunette ring to the trailer channel using two 5/8" grade-8 bolts, washers and nuts (not included). Tighten all bolts to 180 ft. lbs.

**Note:** Never exceed the rated capacity of the vehicle or lowest rated towing component.

**BEFORE EACH USE:** Inspect the unit for proper operation and worn, damaged or missing parts. Replace parts as required or when the unit's wear exceeds 1/8" from the original surface.



### Locking the Lunette Ring

Drop the locking pin into the position shown to the right. Install a padlock (not included) into the locking pin.

The locking pin can still be used when the lunette ring is in the drop position, as shown.



### Unlocking the Lunette Ring

Ensure the locking pin is in the unlocked position prior to hooking up the trailer.

Remove the padlock. Lift and turn the locking pin to the side, 90 degrees, as shown. Reinsert the padlock to keep the locking pin secure during travel.

